

Firmware Update Procedure

Digital Cinema Camera

EOS C200
EOS C200B



This document explains the procedure and cautionary notes for updating (overwriting) the firmware of the EOS C200 or EOS C200B Digital Cinema Camera.

*Firmware is software installed to control the equipment. It is the firmware that handles many of the camera's operations, such as shooting or image processing.

IMPORTANT: Precautions for updating the firmware

If the firmware update is not performed correctly, **the camera may stop working.**

Please be sure to carefully read the important points below, and perform operations in accordance with the following operating procedure.

- All camera settings will be reset when you perform the firmware update.
- It is not possible to revert the firmware back to a previous version after you have performed the firmware update.
- Please be absolutely sure NOT to operate the camera buttons or remove the camera's power source during the firmware update. **Doing so may cause the camera to malfunction.**

Step 1: Prepare items required for the update


To start with, please prepare the following items.

- Camera Body EOS C200 or EOS C200B
- Computer (Windows: 10, 8.1, 8, 7 SP1 / Mac OS: 10.7 to 10.13)
- Memory card (128 MB or higher capacity SD/SDHC/SDXC commercially available memory card)
- Memory card reader/writer (commercially available SD card reader or SD card slot built into the computer)
- BP-A30 battery pack (supplied with the camera)
- CA-A10 AC adapter (supplied with the camera)

Step 2: Check the current firmware version

Check whether or not the update applies to the camera's current firmware version.

1. Connect the compact power adapter to the camera, and insert the battery pack into the camera.

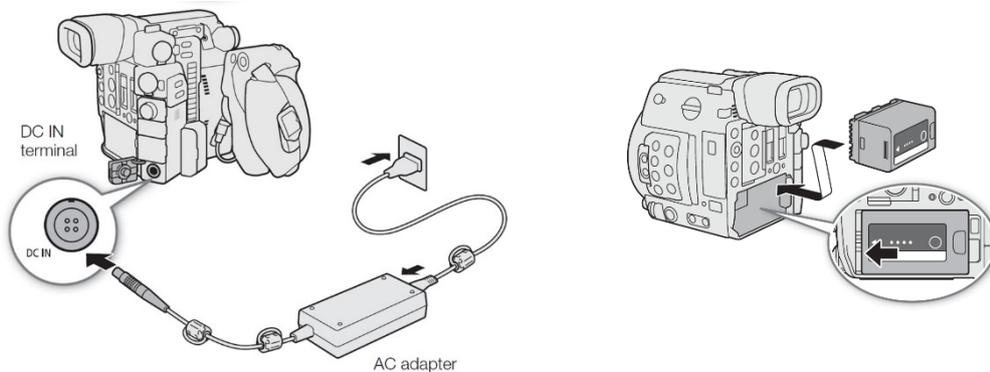

2. Set the **POWER** switch to CAMERA.



3. Press the MENU, and open the [Firmware] submenu.

[MENU] > [System Setup] > [Firmware]

- The current camera firmware version will appear on the screen.



If the version number is 1.0.4.1.00:

⇒ Firmware update is not required (the firmware has already been updated).

If the version number is 1.0.3.1.00 or earlier:

⇒ The firmware can be updated by following the procedure from Step 3 onwards.

4. Press the MENU, and set the **POWER** switch to OFF.

Step 3: Prepare an SD card to use for the firmware update

As preparation before the update, first initialize an SD card, and then use a computer to copy the downloaded update data to the SD card.

Caution

When you initialize the SD card, all of the data saved on it will be erased. Please save any important data on the SD card to your computer or somewhere else before initializing the SD card. In addition, if you perform the firmware update with data remaining on the SD card, it could cause the camera to malfunction. Make sure you initialize the SD card before performing the update.

Initialize the SD card with the camera

1. Insert the SD card into the camera's **SD card slot A**, and close the SD card compartment cover.
2. Set the **POWER** switch to CAMERA.
3. Press the MENU, and open the [Initialize Media] submenu.
4. Select [SD Card A] and then press the joystick.

[ Recording/Media Setup] > [Initialize Media] > [SD Card A]

5. Select [OK] and then press the joystick.
6. When the confirmation message appears, press the joystick.
 - The SD card is initialized and all the data it contains is erased.
7. Press the MENU, set the **POWER** switch to OFF, and then remove the SD card.

Copy the firmware update data to the SD card

Use a computer to copy the firmware update data to the SD card initialized on the camera. For computer operations, please refer to the procedure below corresponding to your computer's OS (Windows or Mac OS).

For Windows:

1. Insert the initialized SD card into a card reader or the computer's SD card slot.
 - A [CANON] icon will be displayed in [Devices with Removable Storage] under [Computer].
2. To copy the data, drag & drop the [VNC4.FIM] update data in the downloaded [c200-v1041-win] folder to the [CANON] icon.

Caution

Please be sure to copy the update data to the root directory of the [CANON] SD card.

3. After copying the data, open the folder by double-clicking the [CANON] icon.
 - If the [VNC4.FIM] file (the firmware update data) is there, the copying process is complete.

For Mac OS:

1. Insert the initialized SD card into a card reader or the computer's SD card slot.
 - A [CANON] icon will be displayed on the desktop.
2. To copy the data, drag & drop the [VNC4.FIM] update data from the downloaded [c200-v1041-mac] icon to the [CANON] icon.


Caution

Please be sure to copy the update data to the root directory of the [CANON] SD card.

3. After copying the data, open the folder by double-clicking the [CANON] icon.
 - If the [VNC4.FIM] file (the firmware update data) is there, the copying process is complete.

Step 4: Update the camera to the new firmware


1. After inserting the charged battery pack into the camera, connect the camera to the power outlet using the compact power adapter.
2. Insert the SD card prepared in Step 3 into the camera's **SD card slot B**.
3. Set the **POWER** switch to CAMERA.
4. Press the MENU, and in the submenu of [System Setup], select [Firmware], and then press the joystick.
 - The firmware update confirmation screen will be displayed.
5. When you select [OK] and then press the joystick, the firmware update will start.

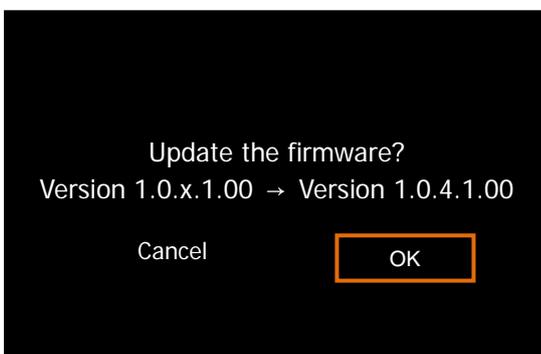

Caution

The firmware update takes **approximately 4 minutes** to complete. During the update, please do not turn off the camera or operate any of its controls. Doing so may cause the camera to malfunction.

- After the update ends, the camera will restart automatically, and a firmware update completion screen will be displayed.

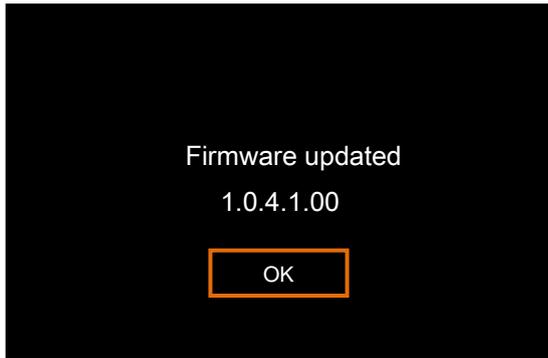

6. When you press the joystick, all settings will be reset and the [Date/Time] screen will appear. Set the date/time.
7. Perform Step 2, and check that the firmware version has changed to [**1.0.4.1.00**].
8. Set the **POWER** switch to OFF, and then remove the SD card.

This completes the firmware update.

Caution

- Make sure to initialize the SD card used for the firmware update before using it again (refer to Step 3). In addition, please delete the downloaded firmware your computer.
- If the firmware update does not finish normally, or if the camera no longer starts normally, please contact our camera repair center.